HY23096-6　EM3399（WS6282）
front size:350x496mm

WS6282 Manuel d'Utilisation

Fonctions :

- Heure radio pilotée DCF
- Réception du signal ON/ OFF
- Format 12/24 H
- Calendrier jusqu'en 2999
- Choix de la langue pour le jour de la semaine : Anglais, Allemand, Italien, Français, Espagnol, Danois et Néerlandais
- Alarmes programmables pour la semaine / le weekend et par jour
- Fonction Snooze (réglable de 1 à 30 minutes ou OFF)
- Indicateur de piles faibles
- Indicateur de confort intérieur
- Prévision météo et pression atmosphérique
- Alerte de gel
- Phases de lune
- Recommandation d'ouverture/fermeture de fenêtre
- Alertes de température extérieure
- Indicateur de tendance
- Hygrométrie: Intérieure & Extérieure de : 20%RH à 95%RH
- Température:
— Plage de mesure de la température intérieure: -9.9°C (13.9°F) ~ 50°C (122°F)
—Plage de mesure de la température extérieure: -40°C (-44°F) ~ 70°C (158°F)
— Unité : °C ou °F
- Affichage des Minimum/maximum pour l'hygrométrie et la température
- Capteur :
— 3 canaux sélectionnables
— Fréquence de transmission : 433.92 MHz RF
— Distance de transmission : 60 mètres en champ libre
— Puissance de transmission +10dBm
- Pression atmosphérique:
— Plage de mesure: 850～1100 mB/hPa (25.10～32.48inHg)
— Unités : mB/hPa ou inHg
- Alimentation :
Station météo : 2 x LR03 AAA + Adaptateur secteur: DC5V 600mA
Capteur : 2 x LR03 AAA

WS6282 Manuel d'Utilisation

Station météo

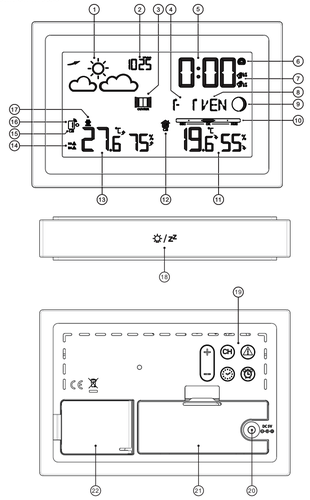

WS6282 Manuel d'Utilisation

1. Prévision météo
2. Pression atmosphérique
3. Symbole d'aération
4. Date
5. Heure
6. Antenne du signal horaire
7. Statut de l'alarme
8. Jour de la semaine
9. Phase de lune
10. Indicateur de confort intérieur
11. Température et hygrométrie intérieures
12. Indicateur de piles faibles pour la station
13. Température et hygrométrie extérieures
14. Symboles d'alertes hautes/basses de température extérieure
15. Indicateur de piles faibles pour le capteur
16. Numéro du canal
17. Alerte de gel
18. Touche rétro-éclairage et snooze
19. Touches de fonction
20. Prise DC
21. Compartiment des piles
22. Socle

Mise en oeuvre:

- Ouvrir le couvercle du compartiment à piles de la station météo
- Insérez 2 piles AAA en respectant la polarité [marques "+" et "-"]
- Lorsque vous insérez les piles, toutes les icônes de l'écran LCD s'allument brièvement pendant 3 secondes, vous entendez un bip. Température et hygrométrie intérieures s'affichent.
- La station météo commencera alors à établir une connexion avec le capteur extérieur. Ce processus dure au maximum 3 minutes et sera matérialisé par un symbole d'antenne de réception clignotant dans le coin supérieur droit
- A ce moment, ouvrez le couvercle du compartiment des piles du capteur à distance, appuyez sur le commutateur de canal pour sélectionner le canal à utiliser, insérez 2 piles AAA en respectant la polarité【voir les marques "+" et "-"】, appuyez sur la touche " °C /°F " pour sélectionner l'unité de temp/rature souhait/e, puis refermez le couvercle.
- Une fois que la station a créé une connexion avec le capteur extérieur, et après un maximum de 3 minutes, la station entrera en mode de réception de l'heure radiopilotée DCF (le rétroéclairage s'éteindra pendant la réception du signal).
- Le rétroéclairage restera allumé une fois la réception DCF terminée.

Réception du signal horaire :

- Maintenez la touche【 — 】pour activer la réception du signal **DCF**. Lors de l'alimentation par secteur, le rétroéclairage s'éteint alors de façon temporaire. Le rétroéclairage se rallume une fois que le signal horaire est reçu.
- Le symbole clignote alors puis le symbole clignote pendant quelques minutes, jusqu'à réception complète.

: Indique une réception réussie

WS6282 Manuel d'Utilisation

: Indique que la réception précédente a réussie, mais la dernière réception a échouée.

- A 1h00 / 2h00 / 3h00 du matin, la station effectue automatiquement la procédure de synchronisation avec le signal DCF pour corriger tout écart par rapport à l'heure exacte. Si cette tentative de synchronisation échoue (l'icône de l'antenne radio disparaît de l'écran), le système tentera automatiquement une autre synchronisation à l'heure pleine suivante. Cette procédure est répétée automatiquement jusqu'à 5 fois au total.
- Pendant la réception DCF，pour arrêter la recherche de signal radio, appuyez une fois sur la touche 【 — 】

NOTE

- Nous recommandons une distance minimale de 2,5 mètres à toutes les sources d'interférences, telles que les téléviseurs ou les écrans d'ordinateur
- La réception radio est plus faible dans les pièces aux murs en béton (ex : dans les caves) et dans les bureaux. Dans de telles circonstances extrêmes, placez la station près de la fenêtre.
- Pendant la réception RCC, seule la fonction des touches **【Lumière/Snooze】**et **【 — 】**active, les autres opérations avec les autres touches n'ont aucune fonction. Si vous souhaitez exécuter d'autres fonctions de fonctionnement, veuillez appuyer d'abord sur la touche 【 — 】pour quitter le mode de réception DCF.

Réglages manuels :

- Maintenez la touche pendant 2 secondes. ON/OFF " clignote, puis appuyez sur les touches【+】et 【 — 】pour activer ON ou désactiver OFF la fonction de réception du signal horaire.
- Appuyez sur la touche pour confirmer et passer au réglage suivant.

Ordre des réglages : RCC ON/OFF→DST ON/OFF→Fuseau horaire →12/24HR→ Heure → Minute → Format de la DATE (Jour/Mois ou Mois/Jour) → Année → Mois → Date → Choix de la langue → Unité de Température ("C/"F) → Unité de pression (hPa/mb ou inHg)→ Pression atmosphérique →Prévision météo

- Utilisez les touches【+】ou 【 — 】pour ajuster les valeurs (maintenez ces touches pour un réglage rapide).
- Appuyez sur la touche pour confirmer et quitter le menu des réglages. La station retourne alors à l'affichage principal.
- Lors du choix du format 12Hr, si « PM » s'affiche avant les heures, cela signifie que l'heure est post méridienne.
- Liste des abbreviations pour les différentes langues:

Langue	Dimanche	Lundi	Mardi	Mercredi	Jeudi	Vendredi	Samedi
GER-Allemand	SON	MON	DIE	MIT	DON	FRE	SAM
ENG- Anglais	SUN	MON	TUE	WED	THU	FRI	SAT
FRE- Français	DIM	LUN	MAR	MER	JEU	VEN	SAM
ITA- Italien	DOM	LUN	MAR	MER	GIO	VEN	SAB
SPA-Espagnol	DOM	LUN	MAR	MIE	JUE	VIE	SAB
DUT- Néerlandais	ZON	MAA	DIN	WOE	DON	VRI	ZAT
DAN- Danois	SON	MAN	TIR	ONS	TOR	FRE	LOR

NOTE.:

- Si aucune opération n'est effectuée sur la station pendant 20 secondes, l'écran repassera automatique à l'affichage principal.

Réglages des alarmes:

WS6282 Manuel d'Utilisation

- Appuyez sur la touche【 — 】pour activer ON ou désactiver OFF l'alarme 1 et l'alarme 2. Le symbole qui apparait indique que l'alarme 1 et/ou l'alarme 2 est active. Si aucun symbole n'est affiché, cela signifie qu'aucune alarme n'est active.
- Appuyez sur la touche , l'heure de l'alarme 1 s'affiche (5 secondes). Puis appuyez à nouveau sur la touche , et c'est l'heure de l'alarme 2 qui s'affiche .Une nouvelle pression sur la touche permet un retour à l'affichage principal de l'heure.
- Lorsque l'heure de l'alarme 1 est affichée, maintenez la touche pendant 2 secondes jusqu'à ce que l'heure et Alarm 1 clignotent. Utilisez les touches【+】et 【 — 】pour régler l'heure.
- Appuyez ensuite sur la touche pour confirmer et passer au réglage suivant. Ordre des réglages :

Heure de l'Alarme1 → Minute de l'Alarme1 → période de l' Alarme1 → durée du Snooze pour l'Alarme1

- Lors du paramétrage des périodes, choisissez parmi :

L-V: alarme du lundi au vendredi
S-D: alarme samedi et dimanche
L-V,
S-D: alarme du lundi au dimanche

- La durée du snooze peut être réglée de 1 à 30 minutes ou complètement éteinte OFF. Si "**OFF**" est paramétré, la fonction Snooze est désactivée.
- Les réglages pour l'Alarme 2 se font selon la même procédure.

NOTE :

- Si aucune opération n'est effectuée sur la station pendant 20 secondes, l'écran repassera automatique à l'affichage principal.
- Utilisez les touches【+】ou 【 — 】pour ajuster les valeurs (maintenez ces touches pour un réglage rapide).
- L'alarme sonne pendant 2 minutes si elle n'est pas désactivée avant par la pression d'une touche.

Désactivation de l'alarme

- Lorsque l'alarme sonne, appuyez sur n'importe quelle touche sauf la touche【SNOOZE】pour arrêter la sonnerie d'alarme
- Lorsque la sonnerie retentit, maintenez la touche 【SNOOZE】 pendant 2 secondes pour stopper la sonnerie.

Fonction Snooze

- Lorsque l'alarme sonne, appuyez brièvement sur la touche【SNOOZE】et l'alarme passera en fonction snooze. La sonnerie d'alarme retentira à nouveau une fois la durée paramétrée écoulée.

Transmission RF

- La station météo commence automatiquement à recevoir la transmission du capteur extérieur pour la température et l'humidité extérieures après l'insertion des piles.
- Le capteur transmettra automatiquement les données de température et d'humidité à la station météo une fois les piles insérées.
- Si la station météo ne parvient pas à recevoir la transmission du capteur extérieur (affichage « - - - » sur l'écran LCD), appuyez sur le bouton 【CH】 pendant 2 secondes. L'icône clignote alors, et la station va lancer une nouvelle recherche.
- La station peut gérer jusque 3 capteurs. Appuyez sur la touche【CH】 pour alterner l'affichage des différents canaux. Lorsque le symbole apparait, les données des different canaux s'affichent alternativement toutes les 5 secondes.

WS6282 Manuel d'Utilisation

Valeurs Maximum/Minimum

- Lorsque la température / hygrométrie sont affichées à l'écran, la station météo commence à enregistrer les valeurs MINI et MAXI de température et d'hygrométrie.
- Appuyez une fois sur la touche【+】: l'écran affiche la valeur MAX de température et d'hygrométrie. Une nouvelle pression sur la touche 【+】, la station affiche la valeur MIN de température et d'hygrométrie.
- "**MAX**" ou "**MIN**" s'affichent à l'écran.
- Les valeurs maximum / minimum sont ré-initialisées par le maintient de la touche 【+】 pendant 3 secondes.
- Les enregistrements du jour sont ré-initialisés automatiquement à minuit (0:00).

Prévision météo

- Veuillez tenir compte des prévisions météorologiques de votre service de prévision météorologique local ainsi que des prévisions de votre station météo. S'il y a des divergences entre les informations de votre appareil et celles du service de prévision météorologique local, veuillez prendre l'avis de ce dernier comme faisant autorité.
- Les prévisions météorologiques sont calculées à partir de l'évaluation des fluctuations de la pression barométrique et peuvent s'écarter des conditions météorologiques réelles.
- La station météo affiche les symboles météo suivants :

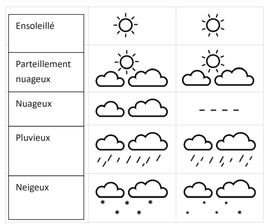

Phases de lune

- La station affiche les phases de lune actuelles :

WS6282 Manuel d'Utilisation

- Après une connexion réussie avec le capteur, la station météo peut afficher la température/hygrométrie extérieure et la tendance de changement.

Rétro éclairage

- Lorsque l'adaptateur secteur alimente la station, appuyez sur la touche pour ajuster la luminosité du rétro éclairage.
- Une fois le rétroéclairage atténué, appuyez sur la touche**【SNOOZE/LUMIERE】**une fois pour passer au rétroéclairage le plus lumineux pendant 15 secondes.
- Lorsque la station est alimentée par piles uniquement (sans l'adaptateur secteur), appuyez sur la touche**【SNOOZE/LUMIERE】** une fois pour allumer le rétro éclairage pendant 15 secondes.

A PROPOS DE L'ADAPTATEUR SECTEUR AC/DC :

N'utilisez pas l'appareil :

- si le bloc d'alimentation ou le câble d'alimentation est endommagé,
- en cas de mauvais fonctionnement,
- si l'appareil a été endommagé de quelque façon que ce soit.

N'utilisez jamais d'objets pointus pour accéder à l'intérieur du bloc d'alimentation. Ne démontez pas le bloc d'alimentation, ne le jetez pas dans un feu. Ne tentez ni de démonter ni de modifier ce produit ou l'un de ses composants. N'exposez pas l'alimentation à des températures élevées ou à la lumière directe du soleil. Ne l'incinérez pas. N'installez pas l'alimentation à proximité d'une quelconque source de chaleur, telle qu'un radiateur, une arrivée d'air chaud, un four ou tout autre appareil (notamment les amplificateurs) produisant de la chaleur. N'entreposez pas ce produit dans un endroit où la température excède la plage suivante : - 10 à 70 °C. N'utilisez pas ce produit dans un endroit où la température excède la plage suivante : 0 à 40° C, car cela risque de l'endommager ou de réduire sa durée de vie. Ne placez pas l'alimentation à proximité de l'eau ou d'une source d'humidité, telle qu'une baignoire, un lavabo, un évier de cuisine, une piscine, dans un sous-sol humide ou tout autre emplacement humide. L'appareil ne doit pas être exposé à des éclaboussures. Ne placez pas d'objets remplis d'eau, tels que des vases par exemple, à proximité de l'appareil. Branchez l'alimentation sur une prise secteur facilement accessible. Veillez à ce que le cordon d'alimentation ne puisse être écrasé ou coincé, en particulier au niveau des fiches, des prises de courant et au point de raccordement à l'appareil. Le bloc d'alimentation fourni est uniquement destiné à une utilisation en intérieur. Ne placez pas de sources de flammes nues (une bougie allumée, par exemple) sur le bloc d'alimentation ou à proximité de celui-ci. Débranchez cette alimentation pendant les orages ou au cours des longues périodes de non-utilisation afin d'éviter de l'endommager. Éteignez votre appareil avant de débrancher le câble de l'alimentation. Cet appareil n'est pas prévu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes dénuées d'expérience ou de connaissance, sauf si elles ont pu bénéficier, par l'intermédiaire d'une personne responsable de leur sécurité, d'une surveillance ou d'instructions préalables concernant l'utilisation de l'appareil. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil. Si l'alimentation fonctionne de manière inhabituelle, et particulièrement si elle émet des sons ou des odeurs qui vous paraissent anormaux, débranchez-la immédiatement et faites-la examiner par un réparateur qualifié. Le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.

INFORMATION DU CONSOMMATEUR

- Les déchets électriques et électroniques contiennent des substances dangereuses. La décharge sauvage ou en milieu non autorisé des déchets électroniques provoque de sérieux dommages à notre environnement.
- Veuillez contacter les autorités locales pour connaître les adresses des centres de collecte ou de tri agréés.
- Désormais, tous les appareils électroniques doivent être recyclés. L'utilisateur doit participer activement à la réutilisation, le recyclage et la récupération des déchets électriques et électroniques.
- La fiche de l'adaptateur secteur (si incluse) est destinée à servir de dispositif de déconnexion, la prise de courant doit être installée à proximité de l'équipement et doit être facilement accessible.
- La mise au rebut non réglementée des déchets électriques peut nuire à la santé publique et à la qualité de notre environnement.
- Comme indiqué sur l'emballage et sur le produit, nous vous conseillons vivement de lire le manuel d'instructions, ceci dans votre intérêt. Il est rappelé que ce produit ne doit pas être jeté avec les ordures ménagères.
- Ni le fabricant ni le fournisseur ne peut être tenu responsable d'éventuels relevés incorrects et des conséquences qui pourraient en découler.
- Ce produit est conçu pour une utilisation domestique uniquement et comme indicateur de la température.
- Ce produit ne doit pas être utilisé à des fins médicales ou à titre d'information du public.
- Les caractéristiques de ce produit peuvent être modifiées sans préavis.
- Ce produit n'est pas un jouet. Tenez-le hors de la portée des enfants.
- Aucune partie de ce manuel ne peut être reproduite sans l'autorisation préalable et écrite du fabricant.

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Directive RED 2014/53/EU
Résumé de la Déclaration de Conformité : Nous certifions que ce dispositif de transmission sans fil est conforme aux dispositions essentielles de la Directive RED 2014/53/EU
LA CROSSE TECHNOLOGY
6 A RUE DU COMMERCE
67118 GEISPOLSHEIM
FRANCE

back size:350x496mm

WS6282 User Manuals

Features:

- DCF Radio controlled clock function
- Radio control function can be switched ON and OFF
- Time in optional 12/24 hour format
- Perpetual Calendar Up to Year 2099
- Day of week in 7 languages user selectable: English, German, Italian, French, Spanish, Netherlands and Danish
- Dual Alarm clock can be set on weekdays / weekends and daily
- Snooze time setting (1~30Minute or OFF)
- Low battery indicate
- Indoor comfort indictor
- Weather forecasting and air pressure detect
- Ice alert
- Moon phase
- Window opening and closing prompt
- Remote sensor temperature alert range set
- Change trend display
- Humidity measurable range: 20%RH ~ 95%RH
- Temperature:
— Indoor temperature measurement ranges: -9.9°C (14.2°F) ~ 50°C (122°F)
— Outdoor temperature measurement ranges: -40°C (-40°F) ~ 70°C (158°F)
— Temperature alternatively in °C or °F
- Maximum /minimum value record of temperature and humidity
- Wireless Outdoor Sensor:
—3 Channels selectable
— 433.92MHz RF transmitting frequency
— 60 meter transmission range in an open area
— Transmission Power +10dBm
- Barometric pressure:
— Barometric pressure measurement ranges: 850～1100 mB/hPa (25.10～32.48inHg)
— Pressure alternatively in mB/hPa or inHg
- Power Supply:
Weather Station:
Battery: 2 x LR03 AAA
Adapter: DC5V 600mA

WS6282 User Manuals

Production Appearance

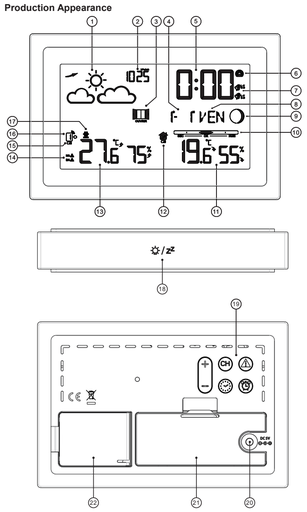

WS6282 User Manuals

1. Weather forecast
2. Air pressure value
3. Window opening and closing prompt
4. Date
5. Time
6. Radio wave receiving status symbol
7. Alarm status indicator
8. Day of week
9. Moon phase
10. Indoor comfort indicator
11. INDOOR temperature and humidity value
12. Main unit low battery
13. Remote sensor temperature and humidity value
14. Remote sensor temperature alert status symbol
15. Remote sensor low battery indicator
16. Channel number
17. Ice alert
18. Light and snooze button
19. Operation button
20. DC input jack
21. Battery compartment cover
22. Bracket

Initial operation:

- Open the main unit battery compartment cover
- Insert 2 x AAA batteries observing polarity ["+" and " –" marks]
- When you insert the batteries, all icons on the LCD will light up for 3 seconds, and you will hear a beep tone, then detect indoor temperature & humidity.
- The main unit will now start to make a connection to the outdoor remote sensor. This process lasts for a maximum of 3 minutes and will displayed by a flashing reception antenna symbol In the upper right corner of the number of channels.
- This moment, Open the remote Sensor battery compartment cover, push the channel switch to select the number of channels to use, Insert 2 x AAA batteries according to the correct polarity【Reference "+" and "–" marks】, Press the "°C /°F" button to select the temperature unit you want, close the battery cover.
- After receiver has created a connection to the outdoor remote sensor, after up to 3 minutes it will enter the **DCF** Radio control time receive mode (The backlight will turn off during RC reception).
- The backlight will remain on after DCF reception is completed.

Reception of the Radio signal:

- Press and hold the【 — 】button to manually enter the **DCF** radio control receiving function, when the adapter is used for power supply, the backlight will be automatically and temporarily turned off after entering receiving mode. After receiving, it will automatically return to the previous backlight brightness.
- Enters **DCF** receiving mode, the symbol will flashing, when a valid signal is detected the symbol no flashing and switch to is flashing, after about a few minutes, the receiving process will end.

WS6282 User Manuals

: Received successfully
: The previous reception was successful, but the last reception failed

- At 1:00 /2:00 / 3:00 AM, the clock automatically carries out the synchronization procedure with the **DCF** signal to correct any deviations to the exact time. If this synchronization attempt is unsuccessful, the system will automatically attempt another synchronization at the next full one hour. This procedure is repeated automatically up to total 5 times.
- During RC reception，to stop searching radio signal, press the【 — 】button once.

F.Y.I.:

- We recommend the product be placed at a minimum distance of 2.5 meters (8.2Feet) to all sources of interference, such as televisions or computer monitors or switching power adapter.
- Radio reception is weaker in rooms with concrete walls (e.g.: in cellars) and in offices. In such extreme circumstances, place the system close to the window.
- During the RC receive mode, only the **【Light/Snooze】**and **【 — 】**buttons have a function, other buttons are not functional, If you want to carry out other functions of operation, please press 【 — 】button to exit the RC receiving mode.

Manual time setting:

- Press and hold the button for 2 seconds, the ON/OFF " starts to flash, and press 【+】and 【 — 】buttons to set the radio control function ON or OFF.
- Press button to confirm the item has been set and go to the next one, the sequence of setting items is as follows:

RCC ON/OFF→DST ON/OFF→Time zone →12/24HR→ HOUR → MINUTE → Format of DATE (D/M or M/D) → YEAR → MONTH → DATE → Language of WEEK → Temperature Unit (°C/°F) →Pressure unit(hPa/mb or inHg)→ Current standard air pressure →Current weather

- When adjusting the value, press and hold the【+】or 【 — 】button to adjust quickly.
- Press button to confirm the last item to end the setting procedures, then it will return to the normal mode.
- When choosing the 12Hr format, if "**PM**" is displayed before the hours, it means that the hour is post meridiem.
- The 7 languages that show week abbreviations are listed below:

LANGUAGE	ENGLISH	GERMAN	FRENCH	SPANISH	ITALIAN	DUTCH	DANISH
DAY	ENG	GER	FRE	SPA	ITA	DUT	DAN
MONDAY	MON	MON	LUN	LUN	LUN	MAA	MAN
TUESDAY	TUE	DIE	MAR	MAR	MAR	DIN	TIR
WEDNESDAY	WED	MIT	MER	MIE	MER	WOE	ONS
THURSDAY	THU	DON	JEU	JUE	GIO	DON	TOR
FRIDAY	FRI	FRE	VEN	VIE	VEN	VRI	FRE
SATURDAY	SAT	SAM	SAM	SAB	SAB	ZAT	LOR
SUNDAY	SUN	SON	DIM	DOM	DOM	ZON	SON

WS6282 User Manuals

F.Y.I.:

- If there is no valid operation within 20 seconds, it will automatically return to normal time mode from the set mode.

Setting the daily alarms:

- Press【 — 】button, you can set Alarm1 and Alarm2 ON or OFF, symbol appear means that ALARM1 is ON, symbol appear means that ALARM2 is ON, symbol or disappear means that Corresponding ALARM is OFF.
- Press once button , LCD display Alarm1 time (5 seconds), press button again when Alarm1 time is displayed, LCD display Alarm2 time (5 seconds), press button again when Alarm2 time is displayed, return to current time display.
- When Alarm1 time is displayed, press and hold button for 2 seconds until Hour of the Alarm1 time starts to flash, press the【+】or 【 — 】buttons to set the required Hour.
- Press button to confirm the item has been set and go to the next one, the sequence of setting items is as follows:

Hour of Alarm1 → Minute of Alarm1 → repeat period of Alarm1 → Snooze time of Alarm1

- When setting the repeat period, comply with the following rules:

L-V: From Monday to Friday
S-D: From Saturday to Sunday
L-V,
S-D: From Monday to Sunday

- The snooze time can be set to 1-30 minutes or OFF, if "**OFF**" is selected, it means that the snooze function is turned off.
- The Alarm2 time can be set according to the same method above

F.Y.I.:

- If there is no valid operation within 20 seconds, it will automatically return to normal time mode from the alarm time set mode.
- When adjusting the value, press and hold the 【+】or 【 — 】button to adjust continuously and quickly
- The Alarm will sound for 2 minutes if you do not deactivate it by pressing any button.

Turn OFF the alarm sound

- When it's ringing, press any button except the【SNOOZE】 button to stop the Alarm sound.
- When it's ringing, touch and hold the 【SNOOZE】button for 2 seconds to stop the Alarm sound.

Snooze function

- When it's ringing, touch the 【SNOOZE】button once the alarm sounds to get to snooze mode, when the set snooze time is over, it will ring again.

RF Transmission Procedure

- The main unit automatically starts receiving transmission from remote sensor for temperature & humidity after batteries inserted.
- The remote sensor will automatically transmit temperature and humidity data to the main unit after batteries inserted.

WS6282 User Manuals

- If the main unit failed to receive transmission from remote sensor ("- -."and "–" display on the LCD),

Press and hold the【CH】 button for 2 seconds, RF icon will be flashing，the main unit will rescan the launch signal of the channel.

- The main unit receive remote signals of up to 3 channels, press 【CH】 button to switch and display data of different channels, when the symbol appears, the data of different channels will be displayed automatically every 5 seconds.

Maximum / Minimum numerical value of memory

- When the temperature and humidity are shown in the LCD, the main unit began to record temperature/ humidity maximum and minimum numerical value.
- Press once【+】button, the LCD will display maximum value of temperature/ humidity. The LCD will display the minimum value of temperature / humidity if press once 【+】button again when the maximum value is displayed.
- at the same time, there are "**MAX**" or "**MIN**" displayed on the LCD.
- The maximum / minimum value will RE records after press and hold 【+】button 3 seconds.
- The memory value of the day will be automatically cleared at 0:00 every night.

Weather forecasting function

Warning: Please take the weather forecast from your local weather forecasting service into account as well as the forecast from your weather station. If there are discrepancies between the information from your device and from the local weather forecasting service, please take the advice of the latter as authoritative.

- The weather forecast is calculated from evaluation of fluctuations in the barometric pressure and may deviate from the actual weather conditions.
- The weather station displays the following weather symbols:

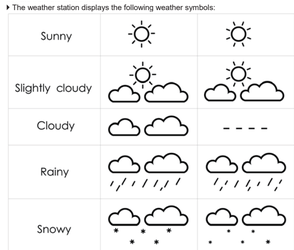

WS6282 User Manuals

Moon phase

- The weather station automatically displays the current lunar phase



Ice alert

- The ice Alert symbol appears and flashing when the remote sensor temperature at –1.0 ~ 2.9°C (30.2~37.3°F).

Outdoor temperature Alert

- Press button , you can set the Outdoor temperature alert function ON or OFF, this operation is only valid for the currently displayed channel, if you want to set other channels, press the 【CH】 button to switch to the channel display you want to set. When the symbol appear means that over upper limit alert function is ON, symbol appear means that over lower limit alert function is ON, symbol or disappear means that Outdoor temperature alert function is OFF.
- Press and hold button for 2 seconds, enter the outdoor temperature upper limit or lower limit value setting mode, the set item will flash, press the【+】or 【 — 】buttons to set the value, press button to confirm the item has been set and go to the next one, press the【CH】button to set the value of other channels.
- When the outdoor temperature exceeds the limit set by the channel，the temperature value and corresponding icon will be flash, and when the temperature is refreshed, as long as the temperature still exceeds the set limit, there will be a beep reminder.

Comfort level

Different levels of display are calculated according to the formula:

Humidity	<35%	35~44%	45~65%	66~80%	>80%

Window opening and closing prompt

- After complex calculation and comparison of indoor and outdoor absolute humidity, the system will use symbols to remind users whether they need to open or close windows.

OUVRIR ------ It is recommended to open the window

FERMER ------ It is recommended to close the window

WS6282 User Manuals

Trend displaying

- The current temperature/humidity/barometric pressure and the temperature/humidity/barometric pressure trend are shown in the LCD display.
- After successfully connecting with the remote sensor, the main unit can display the outdoor temperature/ humidity and the change trend.

Background lighting

- When the adapter is used for power supply, press the button can adjust the backlight brightness.
- After the backlight is dimmed, touch the 【SNOOZE/LIGHT】 button once to jump to the brightest backlight for 15 seconds.
- When the product is powered only by battery (without adapter), touch the 【SNOOZE/LIGHT】button once to turn on the backlight for 15 seconds.

ABOUT AC/DC POWER SUPPLY

Do not use the device:
-if the power supply or the power cable is damaged,
-in the event of a malfunction,
-if the device has been damaged in any way.

Never use sharp objects to access the inside of the power supply. Do not disassemble the power supply, do not throw it into a fire. Do not attempt to disassemble or modify this product or any of its components. Do not expose the food to high temperatures or direct sunlight. Do not incinerate it. Do not install the power supply near any heat sources, such as a radiator, hot air supply, oven, or other apparatus (including amplifiers) that produce heat. Do not store this product in a place where the temperature exceeds the following range: - 10 to 70 ° C. Do not use this product in a location where the temperature exceeds the following range: 0 to 40 ° C, as this may damage it or shorten its life. Do not place the power supply near water or a source of moisture, such as a bathtub, kitchen sink, swimming pool, in a wet basement, or other damp locations. The device must not be exposed to splashes. Do not place objects filled with water, such as vases for example, near the appliance. Connect the power supply into an easily accessible DC outlet. Ensure that the power cord can not be crushed or pinched, particularly at plugs, convenience receptacles, and the point where they are connected to the apparatus. The supplied power supply is intended for indoor use only. Do not place naked flame sources (such as a lit candle) on or near the power supply. Unplug this power during lightning storms or during long periods of non-use to avoid damage. Turn off your device before disconnecting the power cable. This device is not intended for use by people (including children) whose physical, sensory or mental capabilities are reduced, or people without experience or knowledge, unless they could benefit ,by the" throung a person responsible for their safety, surveillance or prior instructions concerning the use of the device. Children should be supervised to make sure that they do not play with the device. If the power supply works abnormally,and especially if it emits sounds or odors that you think are abnormal, unplug it immediately and have it examined by a qualified repairer. The socket-outlet must be installed near the equipment and must be easily accessible.

LIABILITY DISCLAIMER：

•The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
•Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
•All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
•The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
•As stated on the gift box and labeled on the product, reading the "User manual" is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
•The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
•This product is designed for use in the home only as indication of the temperature.
•The plug on the power adapter (if included) is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.
•This product is not to be used for medical purposes or for public information.
•The specifications of this product may change without prior notice.
•This product is not a toy. Keep out of the reach of children.
•No part of this manual may be reproduced without written authorization of the manufacturer.

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

RED DIRECTIVE 2014/53/EU
Summary of the Declaration of Conformity: We hereby declare that this wireless transmission device does comply with the essential requirements of RED Directive 2014/53/EU.

LA CROSSE TECHNOLOGY
6 A RUE DU COMMERCE
67118 GEISPOLSHEIM
FRANCE